

## INSTRUCTIONS

### Utility sled / Luge utilitaire LHT75

#### Creating Sled Dividers

**Recommended Material:**  
Plywood, 1/2 in. or 5/8 in. thick

**Required tools:**  
Cutting pattern (this sheet)  
Adhesive tape  
Pencil  
Jigsaw  
Sandpaper

#### CAUTION

It is better to cut the separating wall slightly oversized. Then adjust its size properly according to your sled.

Handle the cutting pattern carefully so that it can be used for cutting a second separating wall and other walls of replacement.

#### Procedure:

1. Cut out the outline of the cutting pattern.
  2. With the use of the adhesive tape, keep the cutting pattern in place on the plywood.
  3. Trace the pattern onto the board.
  4. Cut with a jigsaw.
  5. Test the fit of the separating wall in your sled and correct size if needed.
- Note: Only the width should require adjustments.**
6. Soften the edge of the board with a sandpaper

#### Notes:

1. Save template for later use.
2. It is recommended to varnish or stain the plywood in order to extend its lifetime.

#### Découpage des séparateurs

**Matériau suggéré:**  
Contreplaqué d'épaisseur 1/2 po ou 5/8 po

**Matériel requis:**  
Patron de découpe (cette feuille)  
Ruban adhésif  
Crayon  
Scie sauteuse  
Papier à sabler

#### ATTENTION

Il est préférable de découper le mur séparateur plus grand que nécessaire. Ensuite, ajuster correctement sa taille selon votre luge.


Manipuler soigneusement le patron de découpe de sorte à ce qu'il puisse servir pour découper un deuxième mur séparateur et autres murs de remplacement.

#### Marche à suivre:

1. Découper le contour du patron de découpe.
  2. Maintenir le patron en place sur la planche en contreplaqué avec du papier autocollant.
  3. Tracer le contour du patron sur la planche.
  4. Découper avec la scie sauteuse.
  5. Tester l'ajustement du mur séparateur dans votre luge et corriger la taille au besoin.
- Remarque: Seule la largeur devrait nécessiter un ajustement.**
6. Adoucir le contour de la planche avec un papier à sabler

#### Remarques:

1. Conserver le patron pour usages ultérieurs.
2. Il est conseillé de teindre ou de vernir le contreplaqué s'il n'est pas pré-traité. Sa durée de vie en sera prolongée.

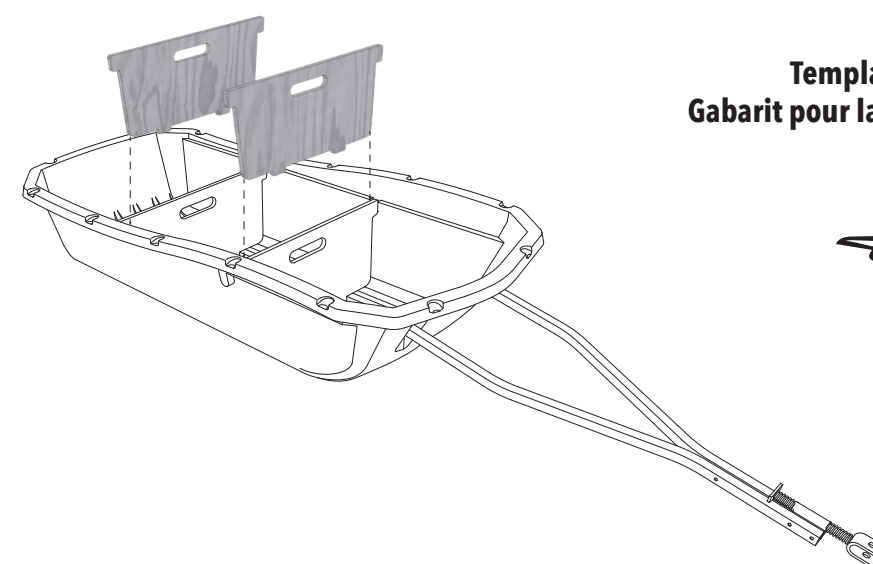

Template for creating sled dividers  
Gabarit pour la fabrication des séparateurs



**IP2115-2**  
GABARIT LHT75  
Template size: 24.97 x 11.65 in.  
Sheet size: 28 x 13 in.  
Folded size: 7 x 4.33 in.